




## C-Series User's Guide Addendum for LCD Lock-out Feature

The LCD lock-out feature applies to Cxi printers using firmware version 195170-202 or higher.

This feature locks out the use of buttons A, B, C & D and thereby prevents changing printers settings via the LCD.

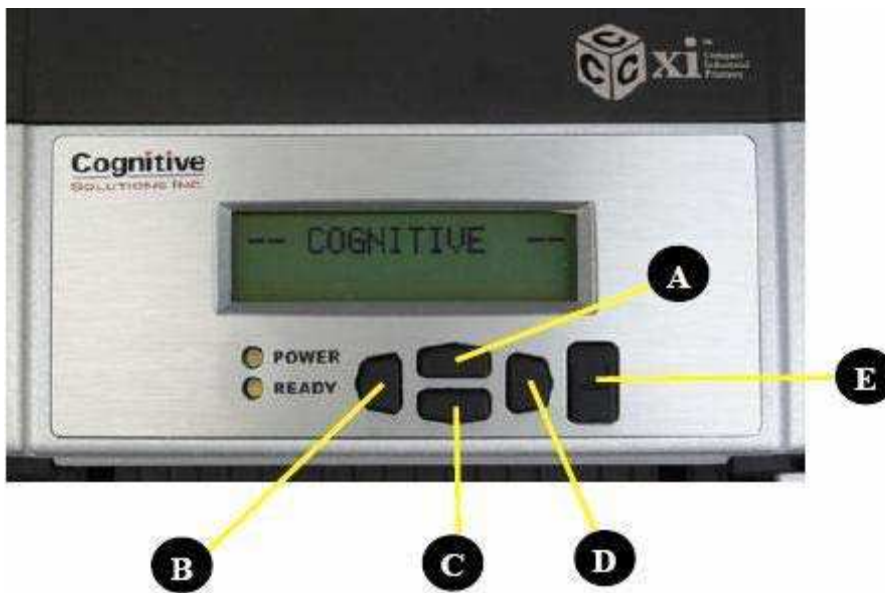

To lock or unlock keypad hold down buttons A, C and E simultaneously.

The display will flash a "Menu Locked" indication briefly if starting in the unlocked state.

The display will flash a "Menu Unlocked" indication briefly if starting in the locked state.