

Configuring your printer through a Web Browser


Power on your printer with the Ethernet Cable plugged in

Print a Self-Test form

Open the receipt cover, while closing, hold down the paper feed button until the printer starts to print.

Look at the print out under the Ethernet Settings

Open a Web Browser and type your IP Address in the Address Bar – You may have to add your IP Address to the Exception List if using a proxy server

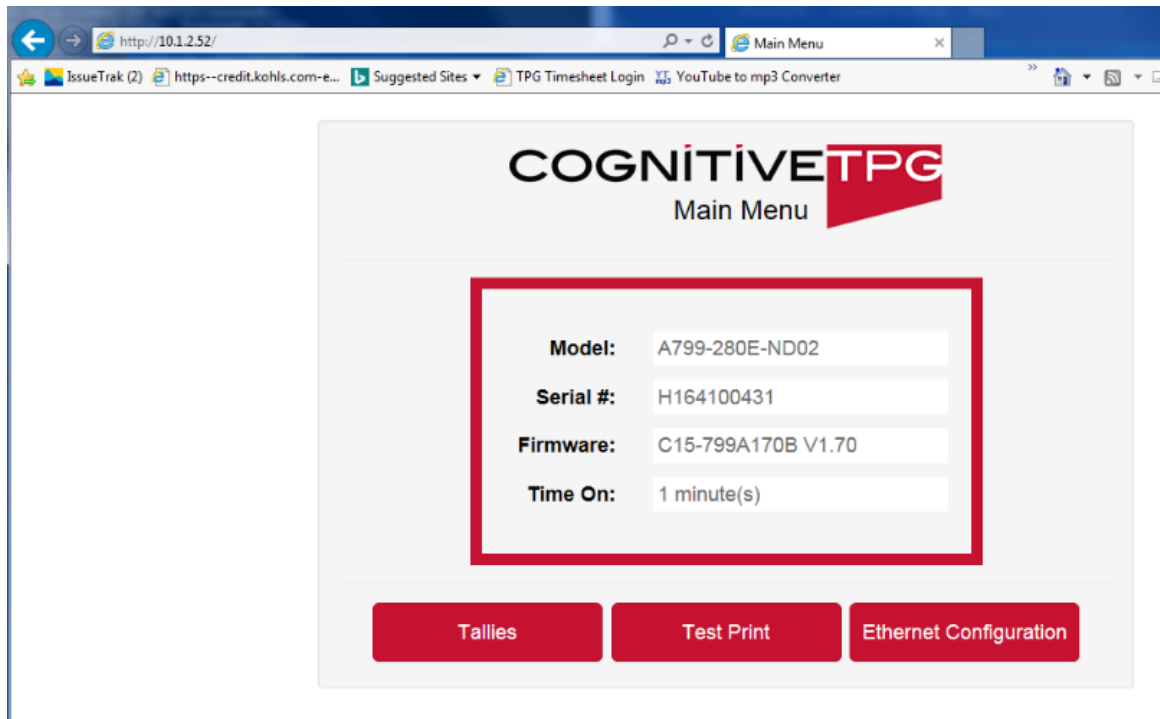

You can view Tallies, Test Print, or set Ethernet Configuration

The screenshot shows a web browser window with the address bar displaying '2.52/ethconfig.html'. The page title is 'Ethernet Configuration'. The browser's address bar also shows 'tps--credit.kohls.com-e...' and several tabs: 'Suggested Sites', 'TPG Timesheet Login', and 'YouTube to mp3 Converter'. The main content area features the 'COGNITIVE TPG' logo and the text 'Ethernet Configuration'. Below the logo is a link: 'Back to Menu'. A message reads: 'Contact your network administrator for the correct settings for your environment.' The configuration options are arranged in a grid:

Raw TCP <input checked="" type="radio"/> On <input type="radio"/> Off Port: <input type="text" value="9001"/>	TCP Loop Back <input type="radio"/> On <input checked="" type="radio"/> Off Port: <input type="text" value="9876"/>	HTTP <input checked="" type="radio"/> On <input type="radio"/> Off Port: <input type="text" value="80"/>
DHCP <input checked="" type="radio"/> On <input type="radio"/> Off	Inactivity Timeout <input type="radio"/> On <input checked="" type="radio"/> Off	Keep Alive <input checked="" type="radio"/> On <input type="radio"/> Off

Below the grid are input fields for:

- IP Address:
- Net Mask:
- Gateway IP:
- DHCP Client Id:

At the bottom are two red buttons: 'Submit' and 'Reset'. A note at the very bottom states: 'Note: Settings shown are the settings stored in Non-Volatile RAM, not the current operating values. After submitting the changes, the printer will need to be reset for changes to take effect.'

Make your changes then hit the Submit button

If you need to set a Static IP, Disable DHCP

****ANY CHANGES YOU MAKE TO ETHERNET SETTINGS,
YOU MUST POWER CYCLE THE PRINTER OR PRESS RESET
FOR THE SETTINGS TO APPLY****